FUSION
HARDWARE GROUP

TOLL FREE CUSTOMER SERVICE 877-215-4683

DEADBOLT

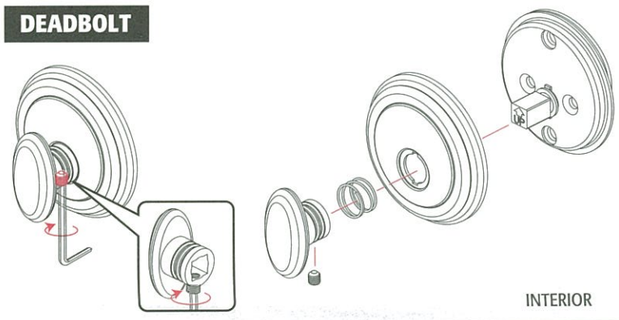

KNOB

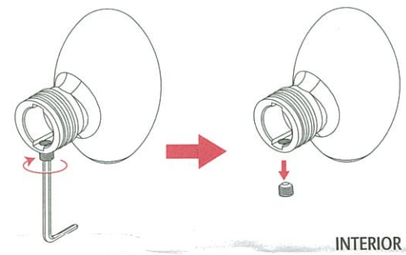

LEVER

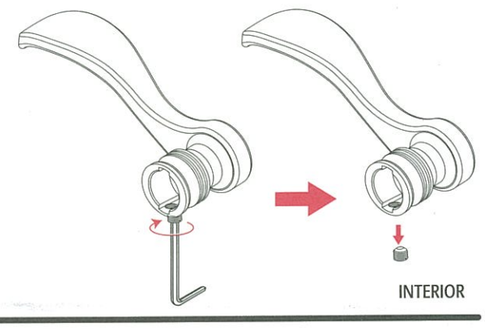

Handleset Installation

Two-Piece Interior – Non-Interconnect

① Bore lower grip anchor position as indicated by the included bore template
② Install upper Deadbolt latch. It is pre-set for 2-3/8" backset. Adjust as shown for 2-3/4" backset
③ Install lower Passage latch into door, first adjusting for appropriate backset
④ Place exterior portion of handleset into door, sliding spindle through the installed latch
⑤ Install interior lower chassis with two screws
⑥ Snap on Interior Rose – Install knob or lever with set screw
⑦ Insert Cylinder Core without key into collar, Exterior Rose or plate, and through latch on outside of door with the cylinder core tailpiece laying flat in the horizontal position
⑧ Install deadbolt position mounting plate with two screws into exterior core chassis
⑨ Attach with two longer screws through interior deadbolt mounting plate and into exterior cylinder core
⑩ Position interior rose, spring and thumb-turn onto stem and tighten with set screw provided, allowing for smooth operation.
⑪ Install interior anchor for lower grab. Snap on finish cover.

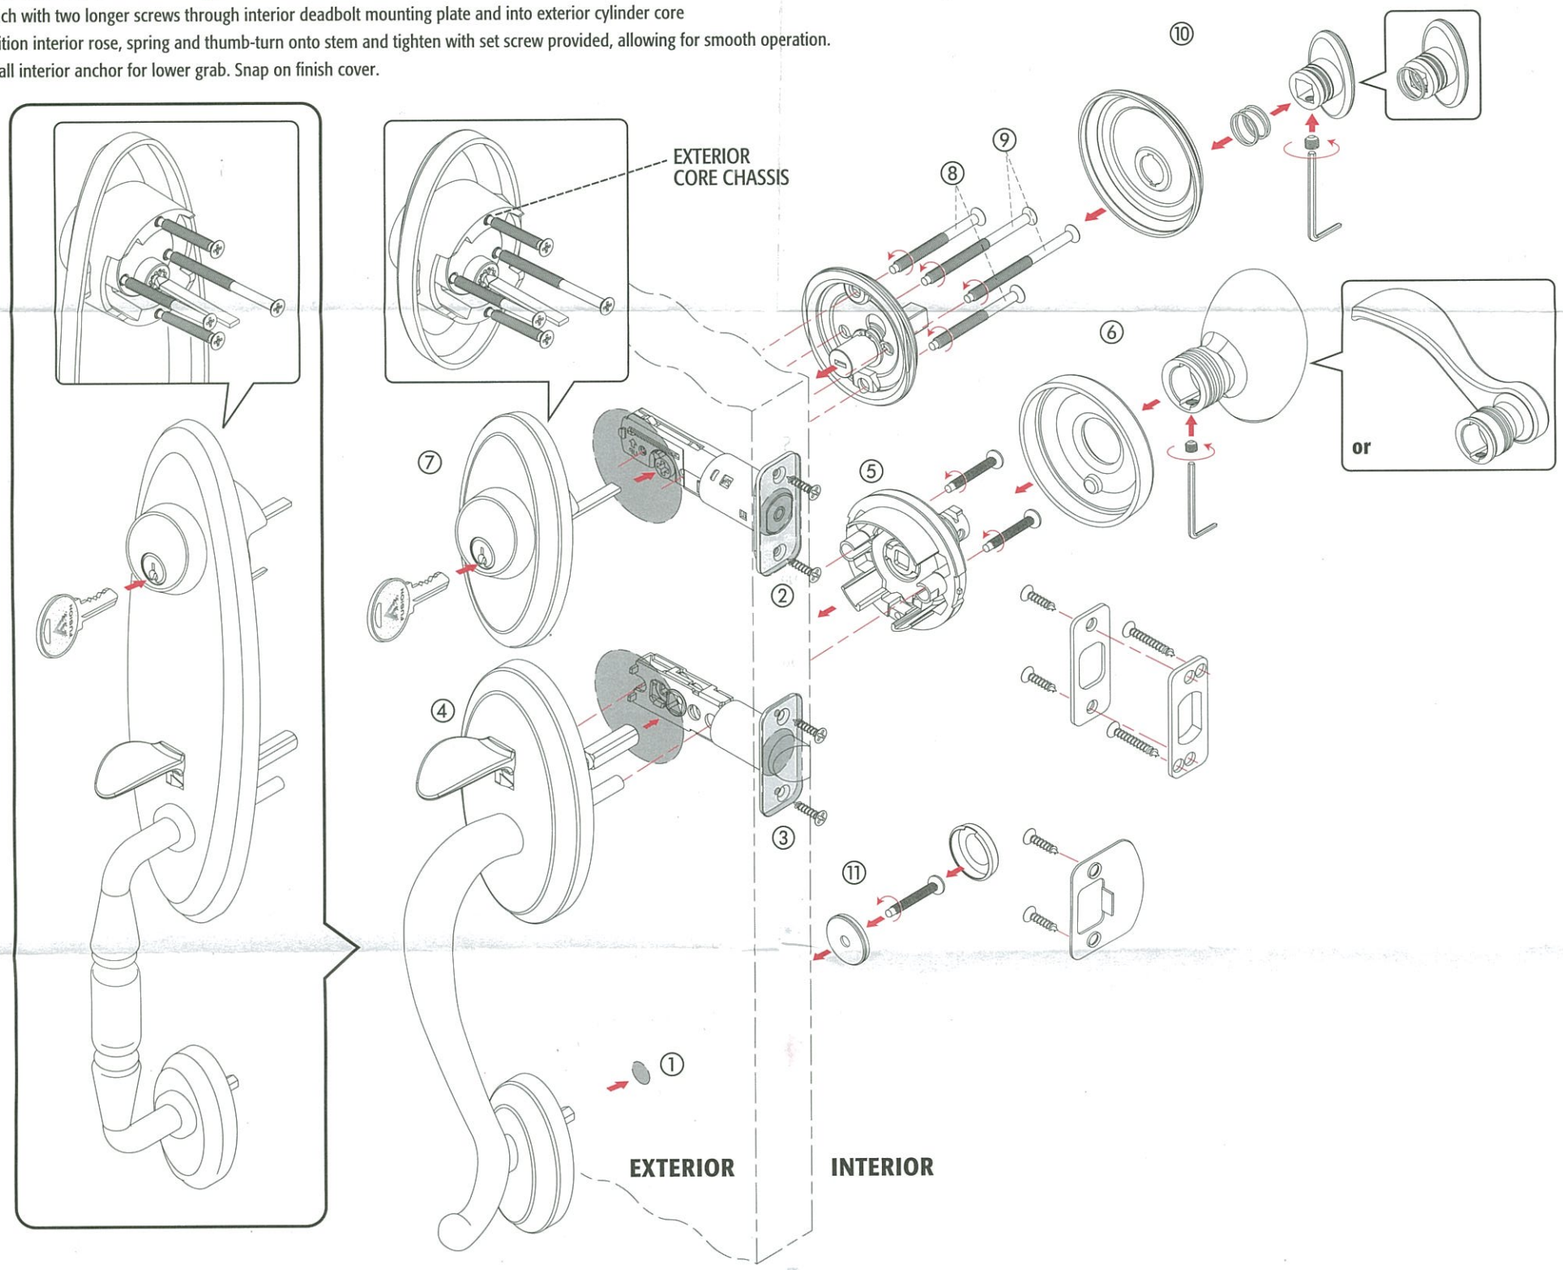

② THIS STEP IS FOR AN ADJUSTABLE DEADBOLT LATCH ONLY
LATCH BACKSET ADJUSTMENT. (Latch backset adjustment only needs to be made if your door needs a 2-3/4" (70 mm) backset. Otherwise NO ADJUSTMENT is necessary.)
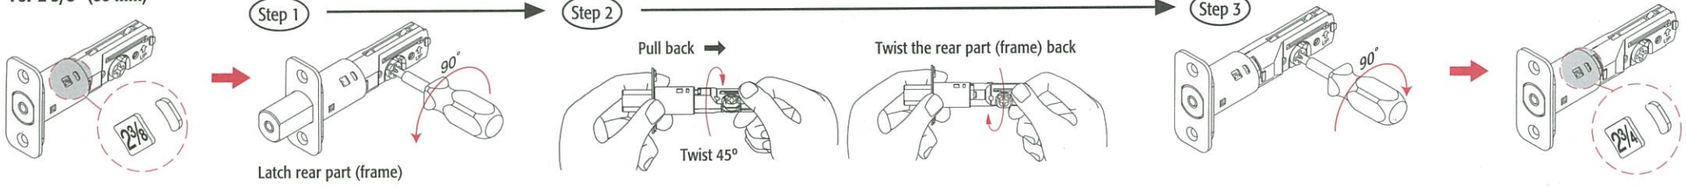
For 2 3/8" (60 mm)